

**Prioritizing maintenance practices
ensures that proper care is administered
to critical HVAC systems**

Health-Care IAQ:

Guidance for Infection Control

By ANDREW J. STREIFEL, MPH, REHS

Indoor-air-quality (IAQ) challenges outnumber all others in the health-care industry. Unfortunately, the cost-conscious powers that be have failed to make the management of critical infection-control systems a top priority.

This article provides guidance in the assessment of infection-control risks so that maintenance practices for health-care IAQ can be prioritized.

Andrew J. Streifel, MPH, REHS, is a hospital environmental health specialist for the University of Minnesota Dept. of Environmental Health and Safety. Over the past 23 years, he has assisted more than 150 hospitals worldwide with matters pertaining to indoor air quality and safe patient-care environments. He is a member of HPAC Engineering's Editorial Advisory Board.

INFECTION-CONTROL RISK ASSESSMENT

Making IAQ a top priority in the health-care industry starts with building design. To understand the design process, it is necessary to identify the areas where the risk of airborne infection is the greatest. This can be done through a process called infection-control risk assessment (ICRA), a basic outline of which follows:

Step 1: Identify patient groups among which the risks associated with airborne infection are the greatest. There are two basic groups. They are:





- *Patient infectious*. This group consists of patients who may spread infectious agents such as tuberculosis, varicella (chicken pox), and rubella (measles).

- *Patient susceptible*. This group consists of patients who are especially vulnerable to common opportunistic airborne infectious agents. These patients include bone-marrow- and solid-organ-transplant recipients, patients undergoing cancer treatment, babies born prematurely, AIDS patients, and patients whose immunity is compromised by interventions such as surgery.

Step 2: Identify the areas where airborne-infection control is necessary. These are:

- *Airborne-infection-isolation rooms*, where airborne infectious agents must be contained. Examples are convalescent rooms, emergency rooms, examination rooms, intensive-care units,

radiology and diagnostic rooms, and procedure rooms.

- *Protective environments*, such as operating and bone-marrow-transplant rooms, which must be free of airborne infectious agents.

Pressure control via an offset between supply- and exhaust-air volumes is essential to preventing the migration of unwanted airborne contaminants into critical areas. Oversupplying a protective environment provides a clean-to-less-clean air-flow direction (Figure 1). Likewise, providing a greater volume of exhaust air to an airborne-infection-isolation room will bias the air flow into the depressurized space, which will contain infectious particles (Figure 2). To assure consistent air flow, the offset between the supply- and exhaust-air volumes must be significantly differ-

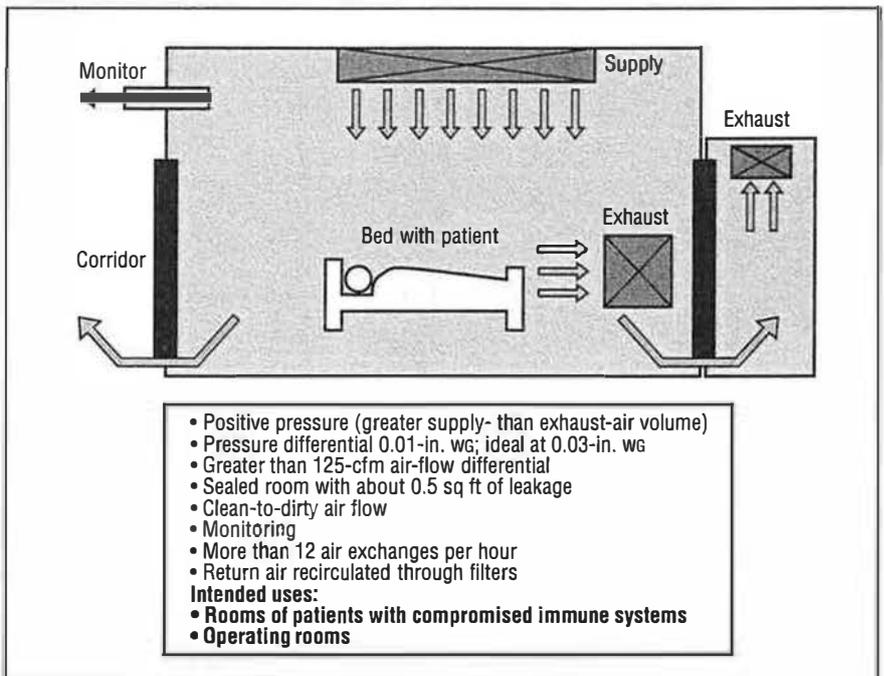


FIGURE 1. Positive-pressure room control for protection from airborne infectious agents.

All About Aspergillosis

Aspergillus species, which are very common environmental fungi originating from soil, are a component of the biodegradation of organic material. They affect patients undergoing treatment for some malignant diseases and organ failure. Difficult to diagnose and treat, *Aspergillosis* is fatal over 80 percent of the time, with the incidence increasing as the acute nature of some diseases increases. Exacerbating the problem is the fact that hospitals are continuously occupied, making renovation difficult. Construction is a major risk factor in acquiring *Aspergillosis* while being treated for an immune-compromising disease.

HEALTH-CARE IAQ

ent. The amount of leakage is minimized by assuring that a differential of more than 125 cfm is provided for a standard-sized special-ventilation room with less than 0.5 sq ft of leakage. (Note: A standard undercut [$\frac{1}{2}$ in.] on a door is about 0.2 sq ft.)

Pressure differential is a measure of air velocity. If the pressure differential is 0.001-in. WG, then the air will move about 120 linear ft per min. If the pressure differential is 0.01-in. WG, then the air will move about 400 linear ft per min. This difference in velocity is important in the prevention of infiltration because if designed for that pressure, the room should provide a more consistent air-flow direction. When it is 0.001-in. WG or less, the room-pressure differential may be affected more readily by the changes in building pressure caused by the opening of doors, elevator movement, and outdoor climate conditions.

Local exhaust ventilation is used primarily to manage occupational exposures to hazardous airborne chemicals such as waste anesthetic gas, ethylene oxide, and medicated aerosols. These agents, which are defined by OSHA, will not be covered in this article.

Step 3: Identify parameters related to:

- Air changes per hour.
- Filtration.
- Pressurization.

See Table 1 for ICRA special-ventilation-room parameters. The measurements were obtained with instruments such as room-balancing velometers, particle counters, and sensitive pressure-measuring devices. Gathered before occupancy, such data can be used to establish benchmarks that are referenced in subsequent problem-solving maintenance activities.

Aspergillosis Outbreak

An *Aspergillosis* outbreak caused by the infiltration of unfiltered air into an oncology patient-care building was described recently.²

The *Aspergillosis* was thought to have entered the oncology building not through the ventilation system, but through tunnels. The airborne spores then migrated up a stairwell into the bone-marrow unit. About 50 percent of the rooms designated for bone-marrow transplantation were depressurized. It was postulated that the unfiltered air was "siphoned" into the negative-pressure rooms.

To correct the problem, supply-air pressure to the rooms was increased, as was supplemental HEPA filtration from portable units.

TABLE 1. Commissioning guidelines for special-ventilation rooms.

VENTILATION PARAMETERS	AIRBORNE INFECTION	PROTECTIVE ENVIRONMENT
Air changes per hour	More than 12	More than 12
Filtration:		
• Supply	90-percent dust spot	99.97 percent at 0.3 μ m
• Return	99.97 percent at 0.3 μ m	Back through filter or 100-percent exhaust
• Toilet	100-percent exhaust	100-percent exhaust
Supply versus exhaust offset	More than 125 cfm	More than 125 cfm
Air-flow direction	Into room	Out of room
Pressure differential	Over 0.01-in. WG	Over 0.01-in. WG
Minimum room leakage	Less than 0.5 sq ft	Less than 0.5 sq ft

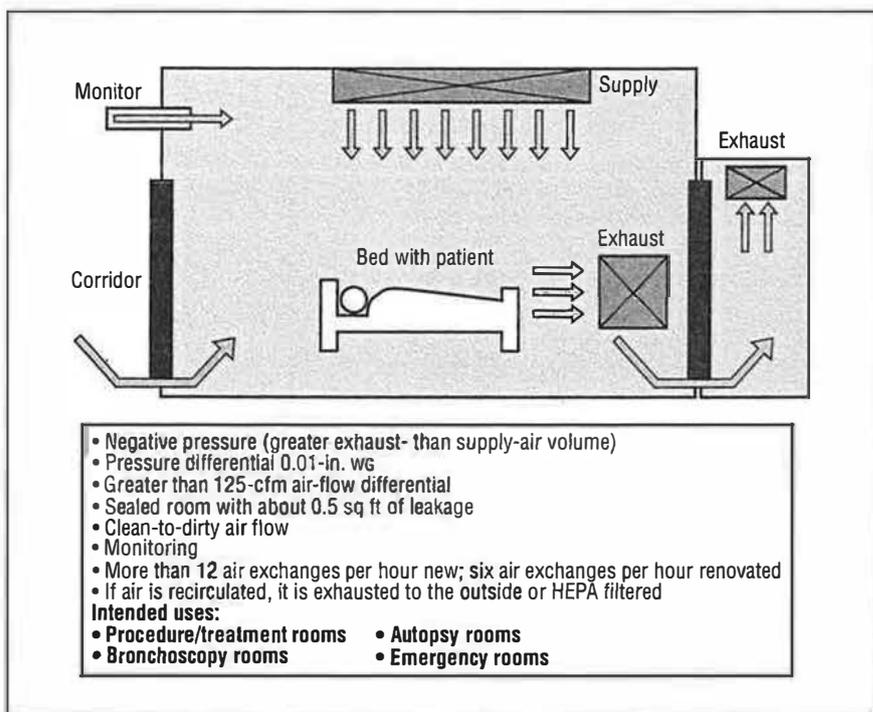


FIGURE 2. Negative-pressure room control for isolation of airborne infectious agents.

Step 4: Maintain accurate, up-to-date records in the following areas:

- Maintenance response. It is important to know what preventive maintenance

has been performed and what complaints have been received.

- Routine maintenance of critical systems. Critical systems are identified in the ICRA process.

- Quality management. This is objective analysis through the use of instrumentation to determine appropriate air-change, filtration, and pressurization parameters for areas requiring special ventilation.

- Litigation/risk management.

The management of a complex patient-care environment is contingent on the knowledge of risks and preventive measures. The proper maintenance

RUSKIN we're in the healthcare business.



Mahaska County Hospital, Oskaloosa, IA

RUSKIN Express




The professionals at Mahaska County Hospital in Iowa understand the importance of good air quality in maintaining a healthy environment. That's why, when they wanted to completely retrofit their mechanical systems, they specified Ruskin air control products.


Ruskin's AMCA Licensed and U.L. Certified Fire/Smoke dampers assure that Mahaska's patients and hospital staff are protected in case of a fire.

In addition to fire/life safety dampers, Ruskin leads the way in meeting ventilation requirements. Ruskin's IAQ dampers both measure and control the right amount of outside air 24 hours a day.

For a **FREE** copy of the complete case study describing the specifics of the Mahaska County Hospital retrofit, or to speak with a local Ruskin representative about your needs, visit our website at www.ruskin.com or call **(816) 761-7476**.

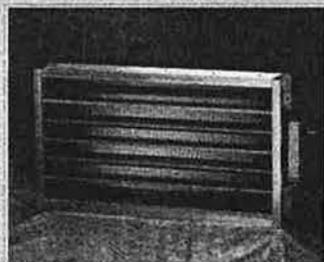

Ruskin IAQ50

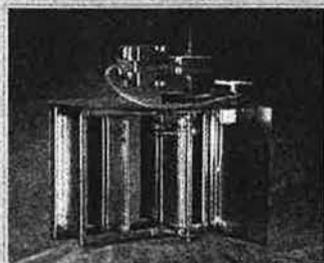

Ruskin FSD60V



RUSKIN®

DAMPERS AND LOUVERS
Specified by Many - Equaled by None

3900 Dr. Greaves Rd., Kansas City, MO 64030
(816) 761-7476 Fax (816) 765-8955


ISO9001
CERTIFIED

INTEROPERABILITY BETWEEN THE WIDEST VARIETY OF BUILDING AUTOMATION SYSTEMS.

CONTROL YOUR WORLD

Centaurus Systems offers hardware and software solutions for all your interface needs. With over 20 years of integration experience, our connectivity experts provide solutions. As experts in protocol and systems engineering we will modernize your legacy systems.

- Widest range of standard and proprietary protocols
- Equipment integration from pre-existing vendors
- Legacy, industrial and open protocol
- Industry interoperability leader
- BACnet options

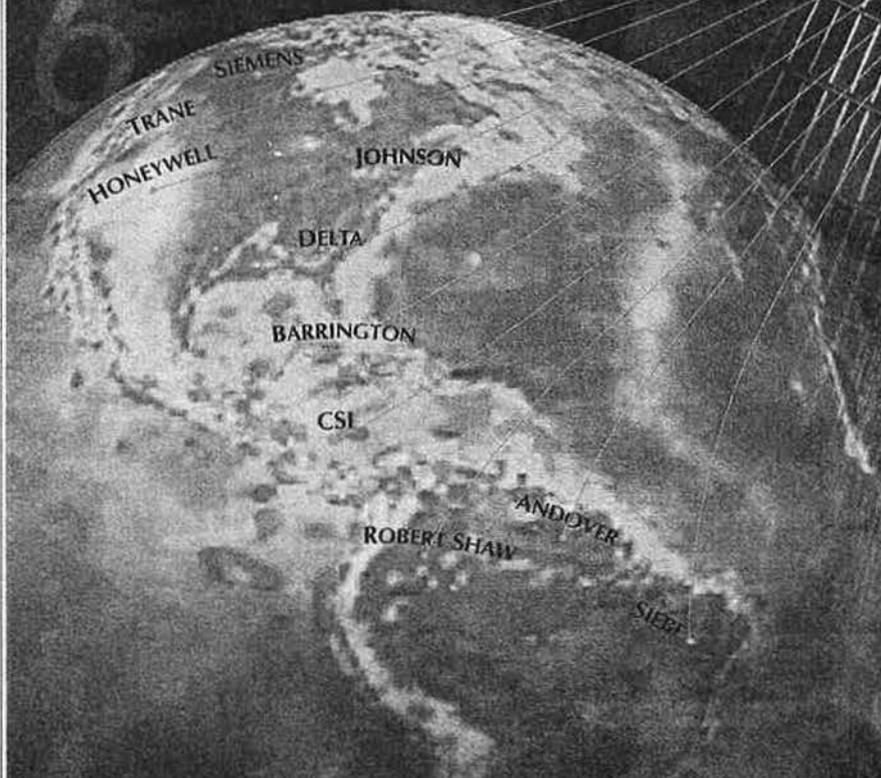

Our integration systems experts are available to meet your interoperability needs within your budget. Call 858.270.4552, or for more information visit www.centaurus.com.

Circle 372 on Reader Service Card



SYSTEMS INCORPORATED



MODBUS N2-Open BEACTH

All registered trademarks or company names are used for identification only and are the property of each respective company.

Centaurus Systems, Inc.
4425 Cass Street, Suite A, • San Diego, CA 92109
tel: 858.270.4552 • fax: 858.273.7769
www.centaurus.com

and operation of equipment is essential. If records show deficiencies leading to microbial growth, then ICRA should be used to identify and possibly correct resulting IAQ problems.

CRITICAL AREAS

Air-quality management is important for the areas listed in Table 2. Generally, special-ventilation requirements will be identified through ICRA. The maintenance and operations staffs of the facility should work as a team to manage the ventilation systems. Infection-control personnel must convey the importance of ventilation management to assure that resources are available for appropriate maintenance.

Some important points to consider:

- For special-ventilation rooms, it is advisable to monitor air pressurization. Sensors and monitoring devices should be maintained and calibrated routinely, as they can become ineffective due to lint accumulation.

- Indoor mold contamination generally is associated with water damage or dust accumulation. A disruption of the environment caused by maintenance or renovation may lead to the release of opportunistic infectious fungal particles. Short-term exposures will not always be detected through air sampling. It is better to avoid the presence of fungi through good maintenance and construction practices than it is to rely on sampling to see if fungi are present.

- The testing and balancing of special-ventilation areas is important to the verification of engineering controls. Testing and balancing should be conducted in critical areas such as bone-marrow-transplant rooms at least yearly or before and after a renovation project.

- Emergency power must be provided to assure the continuous operation of essential-ventilation systems in special-ventilation areas. These systems must be available at all times to ensure patient and employee safety. Essential-ventilation fans


IAQ Tool Kit

A tool kit for evaluating health-care IAQ includes:

- A particle counter for measuring particles per unit volume.
- A pressure-testing device for measuring air-flow pressure.
- A smoke stick for demonstrating air-flow direction.
- An air sampler for collecting airborne particles capable of growing on growth media.

When evaluating air quality, we are looking for airborne particles. When filtration is appropriate, the lowest counts should be in the areas with the highest filtration. The particle counter will provide real-time air-quality analysis without knowing what the particles are. Reducing the number of particles from the outside air will remove incoming airborne fungi. These devices help to determine air-flow direction and filtration efficiency.

**Wringer ES - The Only Unit on the Market
Specifically Designed to
Condition Outdoor Air**

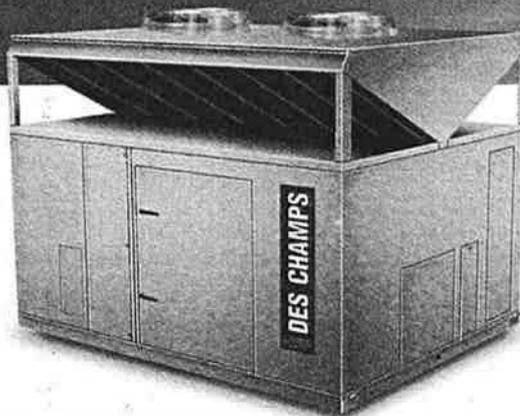

- The Des Champs Wringer® ES pre-cools, dehumidifies, and reheats ventilation air using a unique integral heat pipe and cooling coil section.
- Requires 30% less mechanical cooling energy for the same dewpoint when compared to conventional systems.
- Supply air dewpoint of 60°F, 55°F, or 50°F over the entire airflow range. No need to use a larger nominal-size unit to achieve a lower dewpoint.
- Flow range from 1,000 to 10,000 CFM.
- Integral DX dehumidification system is standard; chilled water coil optional.

- Applications:
 - 1) 100% conditioning of outdoor air.
 - 2) 100% recirculation to control humidity and temperature during unoccupied periods.
 - 3) Any combination of outdoor and recirculated air to achieve the desired building pressure, percentage of outdoor air, or energy savings.

DES CHAMPS
LABORATORIES INCORPORATED
A Unit of Entrodyne Corporation



Ph: 540.291.1111 • Fax: 540.291.2222 • www.deschamps.com • © 2000 Des Champs Laboratories Incorporated

Circle 329 on Reader Service Card

HEALTH-CARE IAQ

should be labeled for the scheduling of maintenance to prevent unnecessary or uncontrolled shutdowns.

• A "tight," well-sealed room is essential to the prevention of the infiltration/exfiltration of air in a special-ventilation room. Cracks in the ceiling, around windows, and around utility connections must be sealed to assure ventilation control.

THE IMPORTANCE OF MAINTENANCE

Not all patient-care areas are hazardous to patients and/or caregivers. Airborne-contamination control pertains to a few microbial agents, irritating particles, and chemical vapors. The mechanical systems used in the control of these hazardous materials require ongoing maintenance to assure the safe ventilation of indoor air.

TABLE 2. Hospital areas with special-ventilation requirements.

AT-RISK AREA	EQUIPMENT	PLANNING	ROUTINE EVALUATION
Bone-marrow transplant	Air-handling system: <ul style="list-style-type: none"> • Filtration • Air exchanges • Positive pressure • Emergency power • Redundant equipment 	<ul style="list-style-type: none"> • Preventive maintenance • Air-quality certification • Emergency planning • Training • Outage notification • Bearings 	<ul style="list-style-type: none"> • Air changes per hr • Pressure differential • Filtration analysis • Vibration check • Fan belts
Operating room	Air-handling system: <ul style="list-style-type: none"> • Filtration • Air exchanges • Positive pressure • Emergency power 	<ul style="list-style-type: none"> • Preventive maintenance • Air-quality certification • Emergency planning • Training • Outage notification 	<ul style="list-style-type: none"> • Air changes per hr • Pressure differential • Filtration analysis • Vibration check • Fan belts • Bearings
Airborne-infection isolation	Air-handling system: <ul style="list-style-type: none"> • Negative pressure • Emergency power • Exhaust systems 	<ul style="list-style-type: none"> • Preventive maintenance • Outage notification • Training • Label fan 	<ul style="list-style-type: none"> • Air changes per hr • Pressure differential • Fan belts
Local exhaust areas	Local vacuum system: <ul style="list-style-type: none"> • Filters • Hose attachments • Air-flow velocity 	<ul style="list-style-type: none"> • Training of operators • Preventive maintenance • Outage notification • Label fan 	<ul style="list-style-type: none"> • Filter changes • Air velocity and/or room-air changes

The American Institute of Architects' *Guidelines for Design and Construction of Hospital and Health Care Facilities*¹ recently was revised to include the aforementioned criteria. If

followed, this standard of care will improve the hospital environment before and after patient occupancy. The prioritization of maintenance should be balanced with the risk involved.


The top environmental and weather watchdogs chose us to humidify the air they breathe.

When the EPA designed its new energy-saving, environmentally-friendly "green building" in Research Triangle Park, NC, the agency called on DGH Systems to help create optimum indoor air quality for the building and its human occupants.

Meanwhile, in Boulder, CO, the National Center for Atmospheric Research (NCAR) works to provide up-to-the-minute research tools and facilities to the entire atmospheric sciences community. Here, our adiabatic MC2000 humidification system provides evaporative cooling to offset the cost of the heat load from the computer lab.



Above is a view of the NCAR climate-controlled center housing CRAY supercomputers.

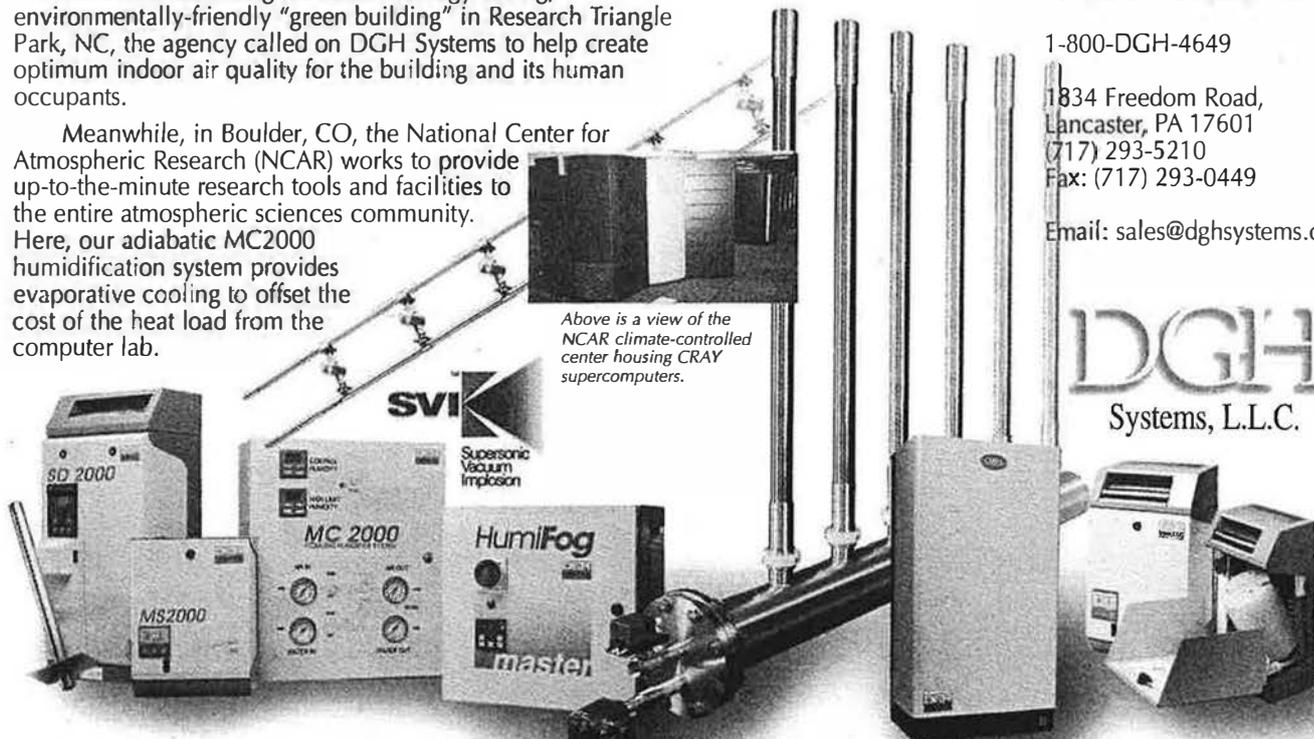

For more information call

1-800-DGH-4649

1834 Freedom Road,
Lancaster, PA 17601
(717) 293-5210
Fax: (717) 293-0449


Email: sales@dghsystems.com

DGH
Systems, L.L.C.

For the full writeup on these and other projects visit: <http://www.dghsystems.com/installations.htm>

Circle 330 on Reader Service Card


FANS TO MOVE AIR IN INDUSTRIAL APPLICATIONS

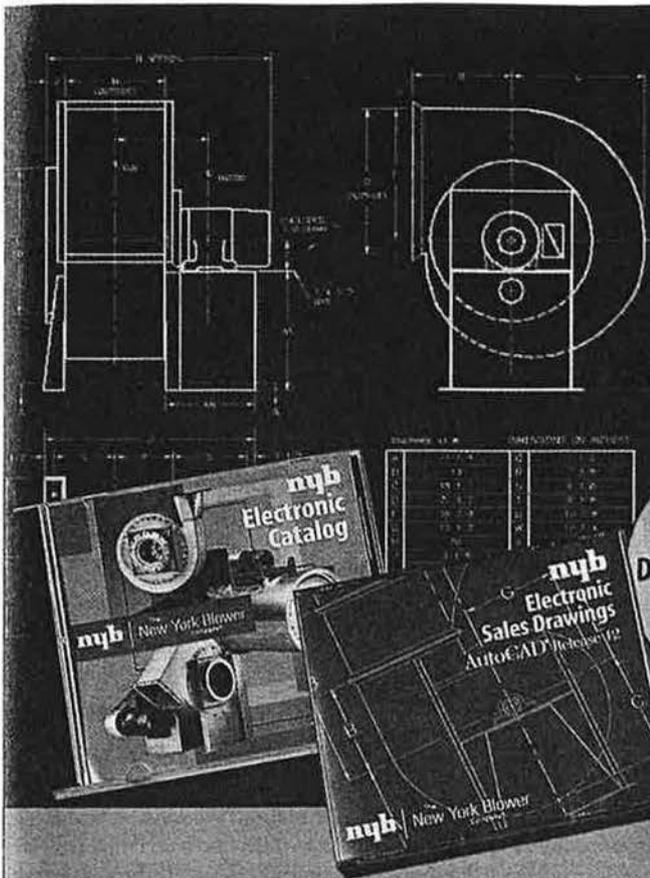

WITH INCREDIBLE FAN SOFTWARE!

New York Blower sets the standard by providing the best electronic selection and drafting tools in the fan industry. A complete windows-based Electronic Catalog on disk and a three CD-Rom library with 14,000 to-scale fan drawings in AutoCAD™ V-12 help you make the best fan selection quickly and easily. Contact your New York Blower representative today!

View on-line at our Web Site or ask for All-Products Catalog.

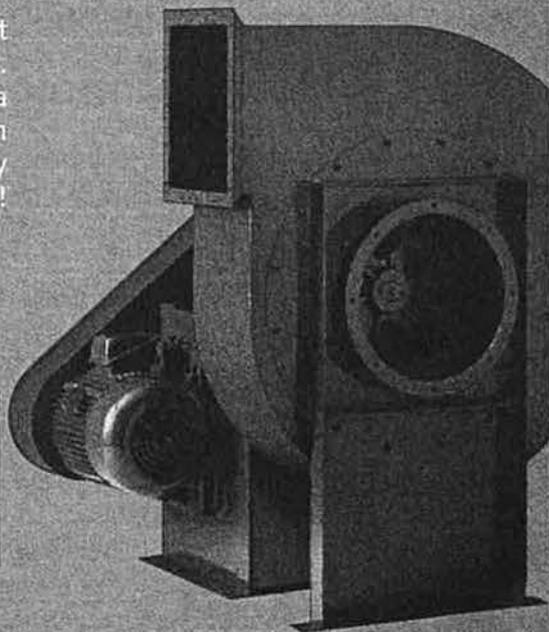

THE NEW YORK BLOWER COMPANY

7660 QUINCY STREET — WILLOWBROOK, ILLINOIS 60521-5596
 TEL: (630) 794-5700 • FAX: (630) 794-5776 • E-MAIL: nyb@nyb.com

Visit us on the Web: <http://www.nyb.com>



Into the 21st Century...

THE BEST FANS STILL KEEP COMING FROM NEW YORK BLOWER!

HEALTH-CARE IAQ

When ventilation is a critical part of hazard management, it is essential that facilities management receive support to assure consistent preventive maintenance. The Centers for Disease Control's upcoming *Guidelines on the Role of the Environment in Nosocomial Infections* will be instrumental in determining how often evaluations must be conducted.

Ventilation control is important in airborne-infectious-disease management. Additionally, routine maintenance of mechanical systems, rapid response to water damage, and construction management are essential components in the maintenance of good IAQ in health-care institutions.

ACKNOWLEDGMENT

The author wishes to thank Gretchen Rings, technical writer for the Dept. of Environmental Health and Safety at the University of Minnesota, for her editorial assistance.

Related Reading

The following articles appeared in *HPAC Engineering* and are available on HPAC Engineering Interactive (www.hpac.com):

- July 1999: "Measurements to Solve Indoor Air Problems: Part 1—Tools of the Trade" by Terry Brennan.
- November 1998: "Controlling Ventilation During Renovation" by William A. Turner, MS, PE.
- October 1998: "A Holistic Approach to Indoor Air Quality in Health Care" by Andrew J. Streifel, MPH.
- October 1998: "The Art and Science of Air Filtration Management in Health Care" by H.E. Barney Burroughs.
- October 1998: "Avoiding Litigation Arising From IAQ Complaints" by Janet R. Davis.
- July 1998: "Airborne Respiratory Diseases and Mechanical Systems for Control of Microbes" by W.J. Kowalski, PE, and William Bahnfleth, PhD, PE.
- July 1998: "Responding to Indoor Air Quality Problems" by Keith Naumann and Doug Lamecker.

REFERENCES

- 1) *American Institute of Architects Guidelines for Design and Construction of Hospital and Health Care Facilities 2001*, AIA Academy of Architecture for Health with assistance from the USDHHS, AIA Press,


Washington, D.C.

- 2) Thio, CL, et al., "Refinements of Environmental Assessment During an Outbreak of Invasive Aspergillosis in a Leukemia and Bone Marrow Transplant Unit," *Infection Control & Hospital Epidemiology*, 2000, 21:18-23. ■


FILTRATION TRENDS

New Filtration Technology Keeps Cooling Tower Water Clean


Typical **Full Flow** filtration using existing pump.

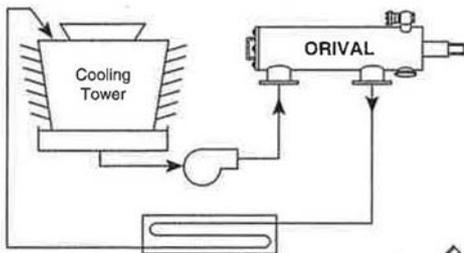


Typical **Side Stream** filtration of basin using a recirculating pump.

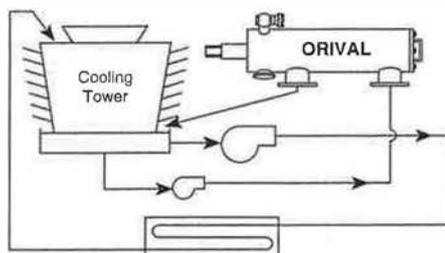

Typical **Side Stream** filtration using a booster pump.

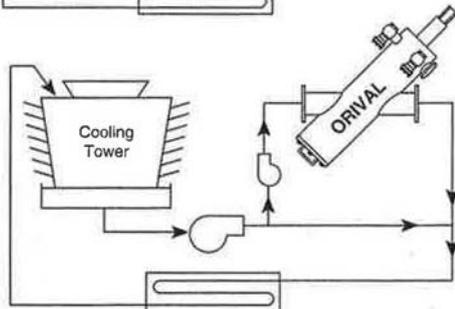

Typical **Side Stream** filtration using existing pump.

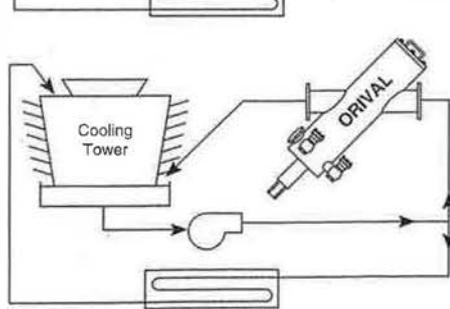

www.orival.com

Every cooling tower has its unique dirt conditions, space constraints and other special characteristics. Filtration systems must take these into account in order to maintain particle free water.

Orival filters meet these range of dirt

specific gravity, even lighter than water. Typical examples include: airborne particles, microbiological growth, bugs, sand, scale, rust, etc.

Line pressure powered, they permit use of the existing cooling tower pump, saving initial system cost. The fully automatic self cleaning cycle takes

seconds and does not interrupt flow.

Reclaim units recirculate rinse water making filtration a zero discharge operation. For more information and system design assistance, contact: Orival, Automatic Self-Cleaning Filters, 40 N. Van Brunt St., Englewood, NJ 07631. (201) 568-3311, (800) 567-9767, Fax: (201) 568-1916.

Circle 332 on Reader Service Card